

# RITTO Twin Plus 4816 Video huoneistopuhelin

## Käyttö

Kun vierailija painaa ovikelloa heidän kuvansa tulee huoneistopu-helimen ruutuun automaattisesti. Nostattaessa luurin voit keskustella vierailian kanssa. Oven voit avata ovenavauspainikkeella ( avaimen-kuva ). Kuvaruutu sulkeutuu automaattisesti asetetun viiveen jälkeen.

## Ovenavaus

Ovi avataan ovenavauspainikkeesta ( avaimen-kuva ).

## Soittoäänenvoimakkuus

Äänen voimakkuutta voidaan muuttaa, kääntämällä äänenvoimakkuus nupista. (Luurin vieressä oleva kääntönuppi ).

## Kirkkauden säätö

Kirkkauden säätö ( )

## Kontrasti

Kontrastin säätö ( )

## Funktio painike

Painike johon voidaan asentaa haluttu toiminto ( esim. porrasvalo päälle).

## Manuaalinen kameran päälle/pois kytkin

Tietyissä malleissa voidaan kamera kytkeä päälle sisältä.

## Kameran valintakytkin


Mikäli 130 asteen kamera on asennettu alaovelle voidaan kameran kulmaa valita.

## Huolto

Puhelin voidaan imuroida tai pyyhkiä kostealla (ei pesuainetta)

### Bedienungsanleitung für Ihre TwinBus Video-Hausstation

Hinweis für den Elektroinstallateur:  
Hängen Sie diese Anleitung bitte an die  
Wandelschnur oder übergeben Sie sie Ihrem Kunden.

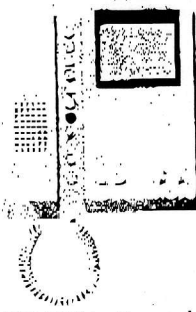

## The video door intercom RITTO TwinBus is extremely easy to use.



Brief operating instructions for your  
house telephone

When a visitor rings your doorbell, their picture is automatically displayed on the monitor.  
If you lift the handset, you can speak to the visitor.  
You can open the door by pressing the appropriate key.  
The monitor is switched off automatically after a preset delay.

### Further controls and functions:

- Brightness control
- Contrast control
- Manual activation of the camera (in a one-family house)
- Switching between the 130° monochrome cameras
- Ringing volume (adjusted with the handset on the hook)
- Switching on external lamps (with the handset on

### Additional functions on a video intercom station with internal communication

1. With the handset lifted, the ringing keys 1-6 can be used for internal calls.
2. With the handset on the hook, the ringing keys 1-6 can be used for other switching functions, such as switching the stairway lights on and off (switching unit required).
3. Alternatively, you can use the lowest ringing key (6), with the handset lifted, to switch the automatic door opener on and off. (This function must be set up during installation and key 6 is then no longer available for internal calls.) The yellow LED lights when the automatic door opener is switched on. If the automatic door opener is installed, internal calls are no longer possible.
4. On a video intercom station with internal calling, key 0 cannot be used.